


**PCC SAWCUT LOCATED IN INTERIOR OF SLAB PANELS**

FCJ = FIXED CONSTRUCTION JOINT WITH DEFORMED TIE BARS SEE **STEEL LAYOUT FOR CONCRETE PATCH – INTERIOR DETAIL T5-11**.

WCJ = WORKING CONTRACTION JOINT WITH SMOOTH DOWELS SEE **STEEL LAYOUT FOR CONCRETE PATCH – INTERIOR DETAIL T5-11**.

**NOTES:**

1. THESE PATCH LAYOUTS APPLY WHEN BOTH A AND B ARE GREATER THAN OR EQUAL TO 5FT.
2. IF C IS LESS THAN 5FT., THEN EXTEND PATCH TO EXISTING JOINT, EXCEPT IF EXISTING JOINT HAS SMOOTH DOWELS, THEN EXTEND PATCH 5FT. BEYOND JOINT, REMOVE EXISTING DOWEL ASSEMBLY AND REPLACE WITH NEW ASSEMBLY.
3. IF NEW JOINT FALLS WITHIN A WHEEL PATH OR MIDDLE OF BIKE LANE, EXTEND RESTORATION TO NEAREST LONGITUDINAL OR TRANSVERSE JOINT.

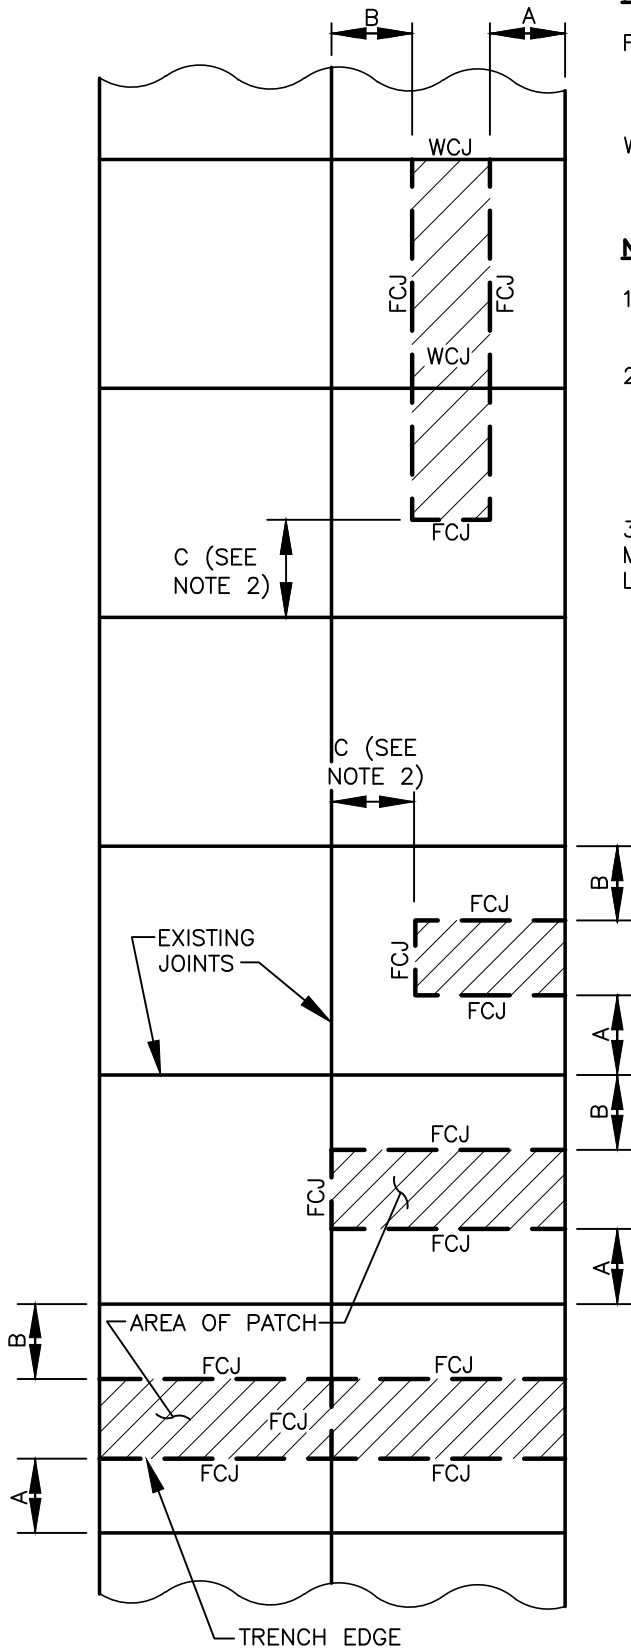

I:\CITYPPS\AUTOCAD\STD\_DETAILS\DRAWING\_FILES\T05-09

REV NO.	DATE	BY	APPR	PUBLIC WORKS – STREETS AND TRANSPORTATION
1	8/04	RAW	MHA	
2	3/06	RAW	MHA	
3	2/07	RAW	MHA	
4	8/08	RAW	MHA	APPROVED BY: <i>MHA</i>
5	7/14	DJM	MHA	ENGINEER MANAGER
6	9/21	RAW	MHA	APPROVED DATE: 9/1/2021



CONCRETE PATCH LAYOUT – INTERIOR

STANDARD PLAN NUMBER  
T05-09