


**INSTALLATION SEQUENCE**

1. DIG FOOTING HOLE AND SET POST FOOTING SLEEVE PLUMB AND SQUARE IN CONCRETE.
2. INSERT REMOVABLE BOLLARD INSERT INTO BOLLARD.
3. TIGHTEN HEX SOCKET SET SCREWS.
4. SET THE BOLLARD AND REMOVABLE BOLLARD INSERT INTO THE POST FOOTING SLEEVE.

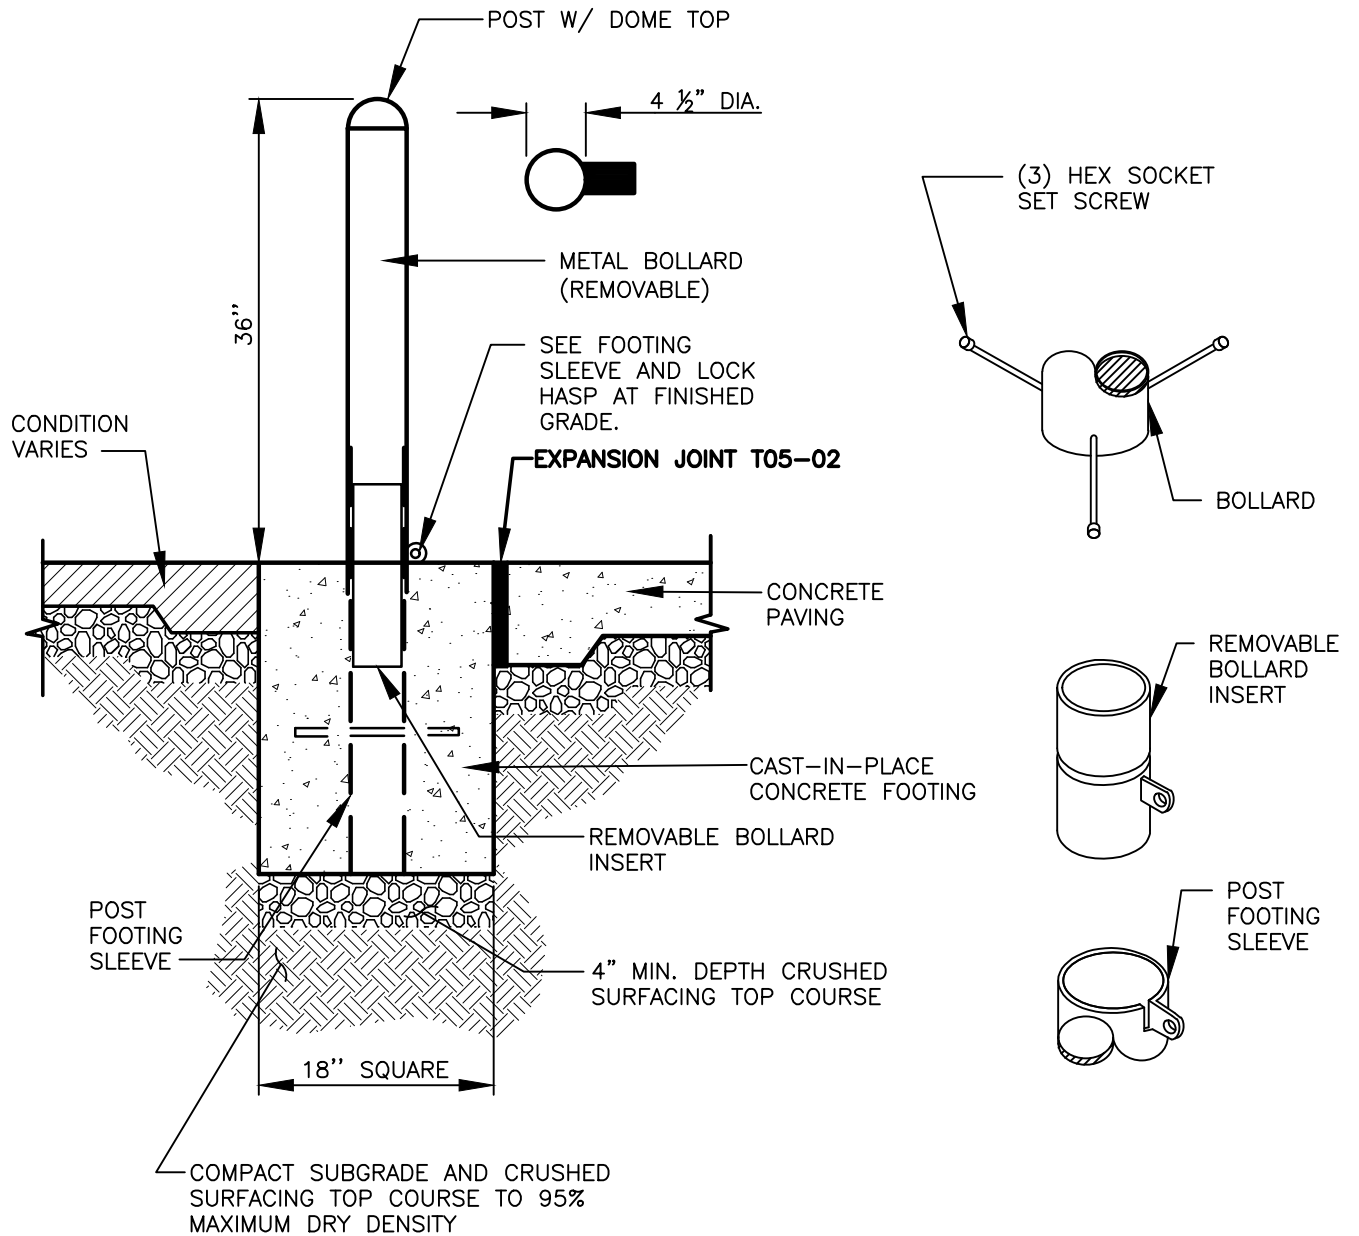

I:\CITYPPS\AUTOCAD\STD\_DETAILS\DRAWING\_FILES\T07-05

| REV. NO. | DATE | BY  | APPR |  |
|----------|------|-----|------|--|
| 1        | 3/06 | RAW | MHA  |  |
| 2        | 2/07 | RAW | MHA  |  |
| 3        | 8/08 | RAW | MHA  |  |
| 4        | 7/14 | RAW | MHA  |  |
| 5        | 4/18 | RAW | MHA  |  |
| 6        | 9/21 | RAW | MHA  |  |

PUBLIC WORKS – STREETS AND TRANSPORTATION

APPROVED BY: *M.H. Sedalla*  
ENGINEER MANAGER

APPROVED DATE: 9/1/2021



REMOVABLE BOLLARD

STANDARD PLAN NUMBER  
T07-05