


PCC SAWCUT LOCATED IN INTERIOR OF SLAB PANELS

FCJ = FIXED CONSTRUCTION JOINT WITH DEFORMED TIE BARS SEE **STEEL LAYOUT FOR CONCRETE PATCH - INTERIOR DETAIL T5-11**.

WCJ = WORKING CONTRACTION JOINT WITH SMOOTH DOWELS SEE **STEEL LAYOUT FOR CONCRETE PATCH - INTERIOR DETAIL T5-11**.

NOTES:

1. THESE PATCH LAYOUTS APPLY WHEN BOTH A AND B ARE GREATER THAN OR EQUAL TO 5FT.
2. IF C IS LESS THAN 5FT., THEN EXTEND PATCH TO EXISTING JOINT, EXCEPT IF EXISTING JOINT HAS SMOOTH DOWELS, THEN EXTEND PATCH 5FT. BEYOND JOINT, REMOVE EXISTING DOWEL ASSEMBLY AND REPLACE WITH NEW ASSEMBLY.
3. IF NEW JOINT FALLS WITHIN A WHEEL PATH OR MIDDLE OF BIKE LANE, EXTEND RESTORATION TO NEAREST LONGITUDINAL OR TRANSVERSE JOINT.

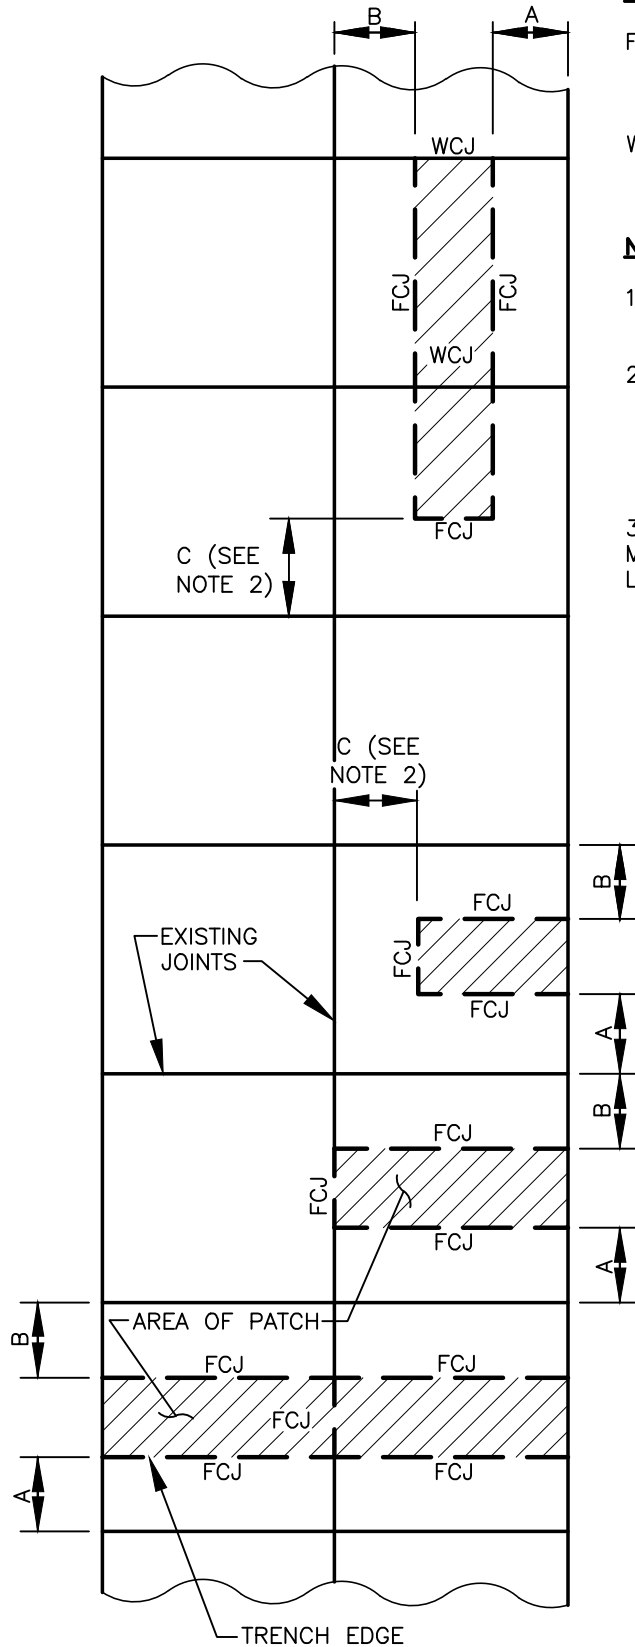

CONCRETE PATCH LAYOUT - INTERIOR



CITY OF VANCOUVER
DEPARTMENT OF PUBLIC WORKS
TRANSPORTATION DIVISION

DRAWN BY	APPROVED BY	APPROVAL DATE
CDC	<i>M.H.H.</i>	8/04
REVISION	APPROVED BY	APPROVAL DATE
7	<i>M.H.H.</i>	3/24

STD. PLAN NO.
T05-09