



MAILBOX IN PLANTER STRIP

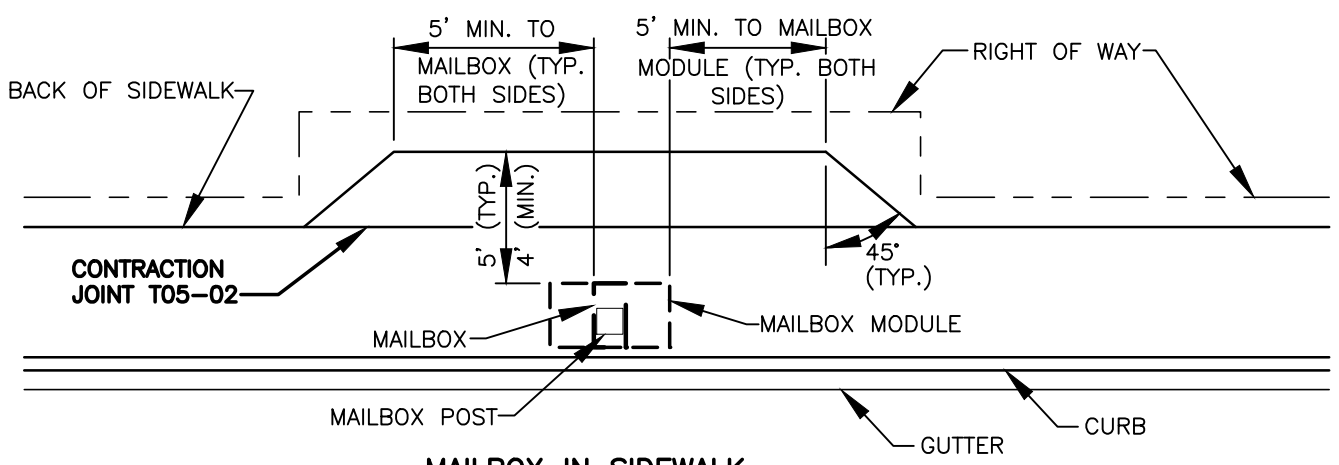

MAILBOX IN SIDEWALK

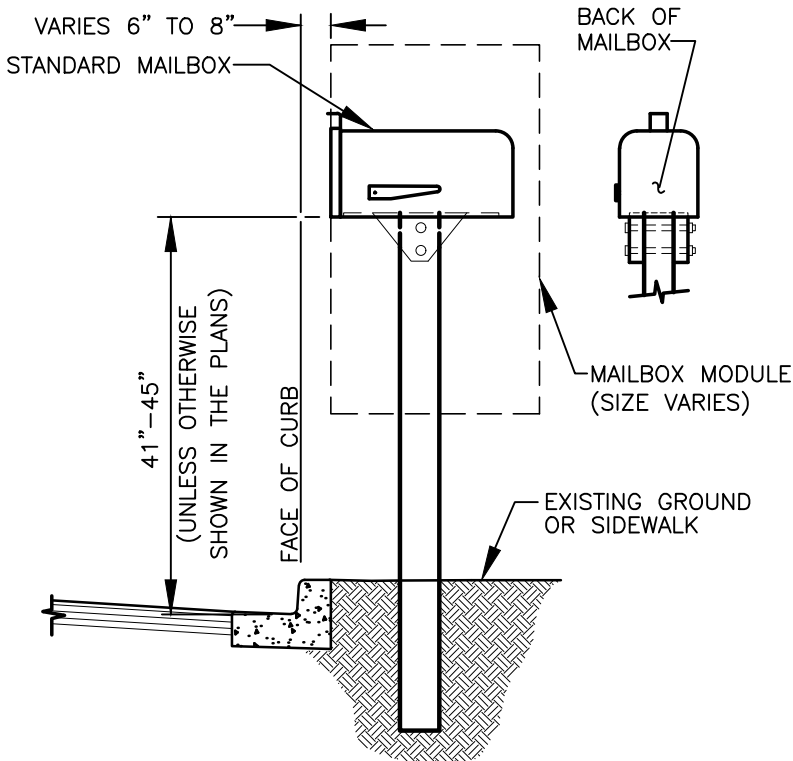

NOTES:

1. SEE WSDOT STANDARD PLAN H-70.10-xx TO H-70.30-xx FOR MAILBOX, POST, BRACKET AND OTHER INSTALLATION DETAILS.
2. MAILBOXES MUST BE POSTMASTER APPROVED.
3. LOCATION OF MAILBOXES ARE SUBJECT TO APPROVAL BY ENGINEER FOR ACCESS AND SIGHT DISTANCE REQUIREMENTS SEE **INTERSECTION SIGHT DISTANCE REQUIREMENTS DETAIL T04-03** AND **VISION CLEARANCE TRIANGLE DETAIL T04-04**.
4. INSTALL EXPANSION JOINT MATERIAL AROUND MAILBOX POST WHEN SET IN SIDEWALK.
5. EXTEND SIDEWALK JOINTS THROUGH WIDENED SIDEWALK SECTION.
6. RESIDENTIAL ACCESS TO MODULE MAILBOX WILL BE ON SIDEWALK SIDE.

I:\CITYAPPS\AUTOCAD\STD_DETAILS\DRAWING_FILES\T07-01.DWG



TYPICAL MAILBOX PLACEMENT

CITY OF VANCOUVER DEPARTMENT OF PUBLIC WORKS TRANSPORTATION DIVISION			DRAWN BY CDC	APPROVED BY MAYHEW	APPROVAL DATE 8/04	STD. PLAN NO. T07-01
			REVISION 7	APPROVED BY MAYHEW	APPROVAL DATE 3/24	