


INSTALLATION SEQUENCE

1. DIG FOOTING HOLE AND SET POST FOOTING SLEEVE PLUMB AND SQUARE IN CONCRETE.
2. INSERT REMOVABLE BOLLARD INSERT INTO BOLLARD.
3. TIGHTEN HEX SOCKET SET SCREWS.
4. SET THE BOLLARD AND REMOVABLE BOLLARD INSERT INTO THE POST FOOTING SLEEVE.

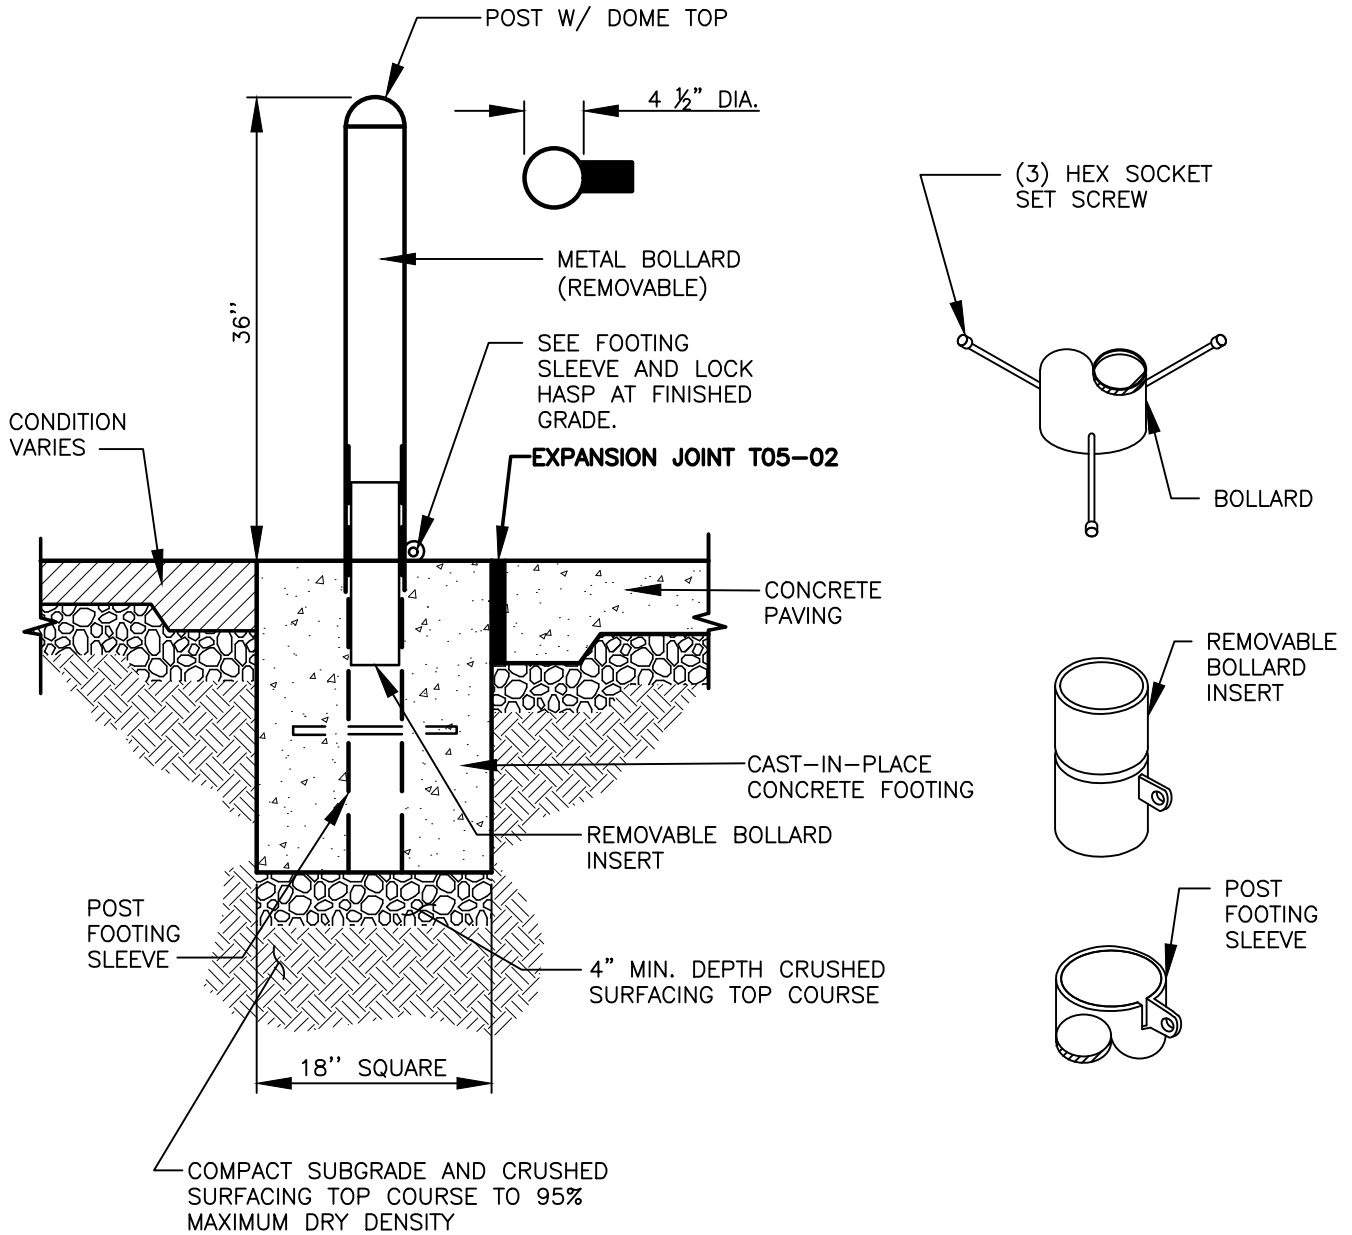

I:\CITYAPPS\AUTOCAD\STD_DETAILS\DRAWING_FILES\T07-05.DWG



CITY OF VANCOUVER
DEPARTMENT OF PUBLIC WORKS
TRANSPORTATION DIVISION

REMOVABLE BOLLARD

DRAWN BY	APPROVED BY	APPROVAL DATE
CDC	<i>M.H.H.</i>	3/06
REVISION	APPROVED BY	APPROVAL DATE
7	<i>M.H.H.</i>	3/24

STD. PLAN NO.
T07-05